

Nissan V41.80 Diagnostics List (Note:For reference only)

ILLUSTRATION: S:Sys. Info. C:DTC--Read code & Clear code D:Data Stream T:Action Test F:Special Functions(F1、F2、F3.....)

F1:Function test(*) F2:Work Support(*) F3:Freeze Frame(*) F4:IDLE AIR VOL LEARN(*) F5:Calib Data (*) F6:Can Diag(*) F7:Can Diag Support Mntr (*) F8:DTC&SRT CONFIRMATION

HLL:HEAD LAMP LEVELIZER, LDW:LANE CAMERA, AFS:ADAPTIVE LIGHT, NATS:NATS IMMU, SE:SMART ENTRANCE, AIRL:AIR LEVELIZER, RCM:REARVIEW CAMERA, SCM:S/BLIND CAMERA, AEM:ACTIVE ENG MOUNT, AS:ACTIVE SUS, ASCD:Auto Speed Control Device, CGC:CHG COMM, TETC:TK_ECU_TYPE_CLUCH, DC:DISTANCE CONTROL, MA:MOTOR ASSIST, IVMS:Integrated Voice-Messaging System, TQC:TORQ CONT, AP:ACCELE PEDAL, CON: CONVERTIBLE ROOF

Vehicle	Vehicle Type	Release Date	Eng	AT	ABS	BCM	IPC	ABG	ICC	HVAC	ITM	EPS	IPDM	APM	HLL	E-4WD	I-KEY	DIU	ASD	PSB	ADP	4WD	4WAS /RAS /HICAS	SON AR	LDW	NAT S	SE	AIRL	RCM	SCM	AS	MA	IVMS	TCS	AP	ABD	CON	E-SUS	LAS	Brea k Cont	AUT O SLID	CAN GAT EWA	POP UP HOO	TOT AL ILLU	OCC UPA NT	MUL TI DISP	SVT													
INFINITI G35 Coupe	CV35	2003	SC																																																									
		2004	D		SC																																																							
		2005	F1	SC	D																																																							
		2006	F2	D	T	SC																																																						
		2007	F3	F1	F1	D							SC				SC	SC																																										
INFINITI G35 Sedan	V36	2006	SC																																																									
		2007	D		SC																																																							
		2008	F1	D	T	SC																																																						
		F3	F1	D																																																								
		F4	F2	T	D																																																							
INFINITI G35 Sedan	V35	2003	SC																																																									
		2004	D		SC																																																							
		2005	F1	SC	D	T	SC																																																					
		2006	F2	D	T																																																							
		F3	F1	F1	D																																																							
INFINITI G37 Convertible	HV36	2009	SC																																																									
		2010	D		SC																																																							
		2011	F1	SC	D	T	SC																																																					
		F2	D	T																																																								
		F3	F1	F1	D																																																							

Nissan V41.80 Diagnostics List (Note: For reference only)

ILLUSTRATION: S:Sys. Info. C:DTC--Read code & Clear code D:Data Stream T:Action Test F:Special Functions(F1、F2、F3.....)
 F1:Function test(*) F2:Work Support(*) F3:Freeze Frame(*) F4:IDLE AIR VOL LEARN(*) F5:Calib Data (*) F6:Can Diag(*) F7:Can Diag Support Mntr (*) F8:DTC&SRT CONFIRMATION

HLL:HEAD LAMP LEVELIZER , LDW:LANE CAMERA , AFS:ADAPTIVE LIGHT , NATS:NATS IMMU , SE:SMART ENTRANCE , AIRL:AIR LEVELIZER , RCM:REARVIEW CAMERA , SCM:S/BLIND CAMERA , AEM:ACTIVE ENG MOUNT , AS:ACTIVE SUS ,
 ASCD:Auto Speed Control Device , CGC:CHG COMM , TETC:TK_ECU_TYPE_CLUCH , DC:DISTANCE CONTROL , MA:MOTOR ASSIST , IVMS:Integrated Voice-Messaging System , TQC:TORQ CONT , AP:ACCELE PEDAL , CON:CONVERTIBLE ROOF

Vehicle	Vehicle Type	Release Date	Eng	AT	ABS	BCM	IPC	ABG	ICC	HVAC	ITM	EPS	IPDM	APM	HLL	E-4WD	I-KEY	DIU	ASD	PSB	ADP	4WD	4WAS/RAS/HICAS	SONAR	LDW	NATS	SE	AIRL	RCM	SCM	AS	MA	IVMS	TCS	AP	ABD	CON	E-SUS	LAS	Brakk Cont	AUTO SLID	CAN GAT EWA	POP UP HOO	TOTAL ILLU	OCC UP ANT	MULTI DISP	SVT					
INFINITI G37 Coupe	CV36	2007	SC																																																	
		2008	D		SC																																															
		2009	T	SC	D																																															
		2010	F1	SC	D																																															
		2011	F2	D	T	SC																																														
INFINITI G37 Sedan	V36	2008	SC																																																	
		2009	D		SC																																															
		2010	T	SC	D																																															
			F1	SC	D																																															
			F2	D	T	SC																																														
INFINITI I30	CA32	1996	SC																																																	
		1997	D		SC																																															
		1998	T	SC	D																																															
		1999	F1	SC	D																																															
		2000	F2	D	T	SC																																														
INFINITI I35	CA33	2002	SC																																																	
		2003	D		SC																																															
		2004	T	SC	D																																															
			F1	SC	D																																															
			F2	D	T	SC																																														

Nissan V41.80 Diagnostics List (Note:For reference only)

ILLUSTRATION: S:Sys. Info. C:DTC--Read code & Clear code D:Data Stream T:Action Test F:Special Functions(F1、F2、F3.....)
 F1:Function test(*) F2:Work Support(*) F3:Freeze Frame(*) F4:IDLE AIR VOL LEARN(*) F5:Calib Data (*) F6:Can Diag(*) F7:Can Diag Support Mntr (*) F8:DTC&SRT CONFIRMATION

HLL:HEAD LAMP LEVELIZER , LDW:LANE CAMERA , AFS:ADAPTIVE LIGHT , NATS:NATS IMMU , SE:SMART ENTRANCE , AIRL:AIR LEVELIZER , RCM:REARVIEW CAMERA , SCM:S/BLIND CAMERA , AEM:ACTIVE ENG MOUNT , AS:ACTIVE SUS ,
 ASCD:Auto Speed Control Device , CGC:CHG COMM , TETC:TK_ECU_TYPE_CLUCH , DC:DISTANCE CONTROL , MA:MOTOR ASSIST , IVMS:Integrated Voice-Messaging System , TQC:TORQ CONT , AP:ACCELE PEDAL , CON:CONVERTIBLE ROOF

Vehicle	Vehicle Type	Release Date	Eng	AT	ABS	BCM	IPC	ABG	ICC	HVAC	ITM	EPS	IPDM	APM	HLL	E-4WD	I-KEY	DIU	ASD	PSB	ADP	4WD	4WAS/RAS/HICAS	SONAR	LDW	NATS	SE	AIRL	RCM	SCM	AS	MA	IVMS	TCS	AP	ABD	CON	E-SUS	LAS	Break Cont	AUTO SLID	CAN GAT EWA	POP UP HOO	TOTAL ILLU	OCCUPANT	MULTI DISP	SVT				
INFINITI Q45	F50	2001	SC																																																
		2002	D		SC																																														
		2003	F1	SC	D																																														
		2004	F2	D	T	SC																																													
		2005	F3	F1	F1	D							SC					SC	D	D				SC	D			C																							
		2006*	F4	F2	F2	T							D	SC	SC	D	T	T					D	D			SC																								
			F7	F3	F3	F1					SC	SC	SC	F2	D	D	T	F3	F1				SC	D			SC	D	T																						
	F8	F7	F7	F2			CD	SC	D	D	D	F3	T	F2	F2	F2		CD	T	D	F2	F7																													
INFINITI QX4	JR50	1997	SC																																																
		1998	D		SC																																														
		1999	F1	SC	D																																														
		2000	F2	D	T	SC																																													
		2001	F3	F1	F1	D							SC				SC	D	D				SC	D				C																							
		2002	F4	F2	F2	T							D	SC	SC	D	T	T					D	D			SC																								
		2003	F7	F3	F3	F1				SC	SC	SC	F2	D	D	D	T	F3	F1				D	SC	D			D	T																						
	F8	F7	F7	F2			CD	SC	D	D	D	F3	T	F2	F2	F2		CD	T	D	F2	F7																													
INFINITI QX56	Z62	2010	SC																																																
		2011	D																																																
			F1	SC	SC																																														
			F2	D	D	SC				SC	SC													SC																											
			F3	F1	T	D				D	D		SC		SC	SC	D							SC	D																										
			F4	F2	F1	T			SC	T	T											SC	D	T																											
			F7	F3	F2	F2			CD	D	F2	F2	D	T	T	T							F2	F2																											
			F8	F8	F3	F3			CD	F1	F3	F3	F3	F3	F2	F2	F2																																		
INFINITI QX56	JA60	2004	SC																																																
		2005	D																																																
		2006	F1	SC	D																																														
		2007	F2	D	T	SC																																													
		2008	F3	F1	F1	D							SC																																						
		2009	F4	F2	F2	T							D	SC	SC	D	T	T																																	
		2010	F7	F3	F3	F1				SC	SC	SC	F2	D	D	T	F3	F1																																	
			F8	F7	F7	F2			CD	SC	D	D	D	F3	T	F2	F2	F2		CD	T	D	F2	F7																											

Nissan V41.80 Diagnostics List (Note: For reference only)

ILLUSTRATION: S:Sys. Info. C:DTC--Read code & Clear code D:Data Stream T:Action Test F:Special Functions(F1、F2、F3.....)
 F1:Function test(*) F2:Work Support(*) F3:Freeze Frame(*) F4:IDLE AIR VOL LEARN(*) F5:Calib Data (*) F6:Can Diag(*) F7:Can Diag Support Mntr (*) F8:DTC&SRT CONFIRMATION

HLL:HEAD LAMP LEVELIZER , LDW:LANE CAMERA , AFS:ADAPTIVE LIGHT , NATS:NATS IMMU , SE:SMART ENTRANCE , AIRL:AIR LEVELIZER , RCM:REARVIEW CAMERA , SCM:S/BLIND CAMERA , AEM:ACTIVE ENG MOUNT , AS:ACTIVE SUS ,
 ASCD:Auto Speed Control Device , CGC:CHG COMM , TETC:TK_ECU_TYPE_CLUCH , DC:DISTANCE CONTROL , MA:MOTOR ASSIST , IVMS:Integrated Voice-Messaging System , TQC:TORQ CONT , AP:ACCELE PEDAL , CON:CONVERTIBLE ROOF

Vehicle	Vehicle Type	Release Date	Eng	AT	ABS	BCM	IPC	ABG	ICC	HVAC	ITM	EPS	IPDM	APM	HLL	E-4WD	I-KEY	DIU	ASD	PSB	ADP	4WD	4WAS/RAS/HICAS	SONAR	LDW	NATS	SE	AIRL	RCM	SCM	AS	MA	IVMS	TCS	AP	ABD	CON	E-SUS	LAS	Break Cont	AUTO SLID	CAN GAT EWA	POP UP HOO	TOTAL ILLU	OCCUPANT	MULTI DISP	SVT															
SENTR A	B16	2006	SC																																																											
		2007	D		SC																																																									
		2008	F1		D																																																									
		2009	F2		T																																																									
		2010	F3	SC	F1	SC																																																								
		2011	F4	D	F2	D							SC																																																	
			F7	F1	F3	T		CD	D				D	CD																																																
			F8	F2	F7	F2	F3	F1					F3	T																	SD	SD																														
SENTR A	B15	2000	SC																																																											
		2001	D		SC																																																									
		2002	F1	SC	D																																																									
		2003	F2	D	T	SC																																																								
		2004	F3	F1	F1	D							SC																																																	
		2005	F4	F2	F2	T							D	SC	SC	D	T																																													
		2006*	F7	F3	F3	F1							F2	D	D	D	T																																													
			F8	F7	F7	F2	CD	SC	D	D	D	D	F3	T	F2	F2	F2	F2	CD	T	D	SC	T	F2	F7	T	CD	F2	SC	F7	F2	F2	F2	F2	F7	F2	F2																									
SENTR A	B14	1995	SC																																																											
		1996	D		SC																																																									
		1997	F1	SC	D																																																									
		1998	F2	D	T	SC																																																								
		1999*	F3	F1	F1	D							SC																																																	
			F4	F2	F2	T							D	SC	SC	D	T																																													
TITAN	A60	2003	SC																																																											
		2004	D																																																											
		2005	T		SC																																																									
		2006	F1	SC	D																																																									
		2007	F2	D	T	SC																																																								
		2008	F3	F1	F1	D							SC																																																	
		2009	F4	F2	F2	T							D	SC	SC	D	T																																													
		2010	F7	F3	F3	F1							F2	D	D	D	T	F3	F1																																											
2011	F8	F7	F7	F2	CD	F1	D	D	D	D	F3	T	F2	F2	F2	F2	CD	T	D	SC	T	F2	F7	T	CD	F2	SC	F7	F2	F2	F2	F7	F2	F2																												

Nissan V41.80 Diagnostics List (Note:For reference only)

ILLUSTRATION: S:Sys. Info. C:DTC--Read code & Clear code D:Data Stream T:Action Test F:Special Functions(F1、F2、F3.....)
 F1:Function test(*) F2:Work Support(*) F3:Freeze Frame(*) F4:IDLE AIR VOL LEARN(*) F5:Calib Data (*) F6:Can Diag(*) F7:Can Diag Support Mntr (*) F8:DTC&SRT CONFIRMATION

HLL:HEAD LAMP LEVELIZER , LDW:LANE CAMERA , AFS:ADAPTIVE LIGHT , NATS:NATS IMMU , SE:SMART ENTRANCE , AIRL:AIR LEVELIZER , RCM:REARVIEW CAMERA , SCM:S/BLIND CAMERA , AEM:ACTIVE ENG MOUNT , AS:ACTIVE SUS , ASCD:Auto Speed Control Device , CGC:CHG COMM , TETC:TK_ECU_TYPE_CLUCH , DC:DISTANCE CONTROL , MA:MOTOR ASSIST , IVMS:Integrated Voice-Messaging System , TQC:TORQ CONT , AP:ACCELE PEDAL , CON:CONVERTIBLE ROOF

Vehicle	Vehicle Type	Release Date	Eng	AT	ABS	BCM	IPC	ABG	ICC	HVAC	ITM	EPS	IPDM	APM	HLL	E-4WD	I-KEY	DIU	ASD	PSB	ADP	4WD	4WAS /RAS /HICAS	SONAR	LDW	NATS	SE	AIRL	RCM	SCM	AS	MA	IVMS	TCS	AP	ABD	CON	E-SUS	LAS	Brea k Cont	AUT O SLID	CAN GAT EWA	POP UP HOO	TOT AL ILLU	OCC UPA NT	MUL TI DISP	SVT			
CEDRI C/GLO RIA	Y33	*	SC2 D2 T2 F12 F22 F32 F42 F72 F8	SC2 D2 T2 D2 F12 F32 F7	SC2 D2 T2 D2 F12 F32 F7	SC2 D2 T2 D2 F12 F32 F7	CD SC	SC	D	D	SC2 D2 T2 D2 F12 F32 F7	SC2 D2 T2 D2 F12 F32 F7	SC2 D2 T2 D2 F12 F32 F7	SC2 D2 T2 D2 F12 F32 F7	SC2 D2 T2 D2 F12 F32 F7	SC2 D2 T2 D2 F12 F32 F7	SC2 D2 T2 D2 F12 F32 F7	CD T	SC2 D2 T2 D2 F12 F32 F7	SC2 D2 T2 D2 F12 F32 F7	SC2 D2 T2 D2 F12 F32 F7	SC2 D2 T2 D2 F12 F32 F7	4WD T	SONAR CD	LDW F2	NATS SC	SE F7	AIRL F2	RCM F2	SCM F2	AS F2	MA F7	IVMS F2	TCS F2	AP	ABD	CON	E-SUS	LAS	SC2 D2 F2										
CIMA	FY33	*	SC2 D2 T2 F12 F22 F32 F42 F72 F8	SC2 D2 T2 D2 F12 F32 F7	SC2 D2 T2 D2 F12 F32 F7	CD SC	SC	D	D	SC2 D2 T2 D2 F12 F32 F7	SC2 D2 T2 D2 F12 F32 F7	SC2 D2 T2 D2 F12 F32 F7	SC2 D2 T2 D2 F12 F32 F7	SC2 D2 T2 D2 F12 F32 F7	SC2 D2 T2 D2 F12 F32 F7	SC2 D2 T2 D2 F12 F32 F7	SC2 D2 T2 D2 F12 F32 F7	CD T	SC2 D2 T2 D2 F12 F32 F7	SC2 D2 T2 D2 F12 F32 F7	SC2 D2 T2 D2 F12 F32 F7	SC2 D2 T2 D2 F12 F32 F7	4WD T	SONAR CD	LDW F2	NATS SC	SE F7	AIRL F2	RCM F2	SCM F2	AS F2	MA F7	IVMS F2	TCS F2	AP	ABD	CON	E-SUS	LAS	SC2 D2 F2										
CREW	K30	1996 1998 1999 2002 2005 2007	SC2 D2 T2 F12 F22 F32 F42 F72 F8	SC2 D2 T2 D2 F12 F32 F7	SC2 D2 T2 D2 F12 F32 F7	CD SC	SC	D	D	SC2 D2 T2 D2 F12 F32 F7	SC2 D2 T2 D2 F12 F32 F7	SC2 D2 T2 D2 F12 F32 F7	SC2 D2 T2 D2 F12 F32 F7	SC2 D2 T2 D2 F12 F32 F7	SC2 D2 T2 D2 F12 F32 F7	SC2 D2 T2 D2 F12 F32 F7	SC2 D2 T2 D2 F12 F32 F7	CD T	SC2 D2 T2 D2 F12 F32 F7	SC2 D2 T2 D2 F12 F32 F7	SC2 D2 T2 D2 F12 F32 F7	SC2 D2 T2 D2 F12 F32 F7	4WD T	SONAR CD	LDW F2	NATS SC	SE F7	AIRL F2	RCM F2	SCM F2	AS F2	MA F7	IVMS F2	TCS F2	AP	ABD	CON	E-SUS	LAS	SC2 D2 F2										
DATS UN TRACK	D22	*	SC2 D2 T2 F12 F22 F32 F42 F72 F8	SC2 D2 T2 D2 F12 F32 F7	SC2 D2 T2 D2 F12 F32 F7	CD SC	SC	D	D	SC2 D2 T2 D2 F12 F32 F7	SC2 D2 T2 D2 F12 F32 F7	SC2 D2 T2 D2 F12 F32 F7	SC2 D2 T2 D2 F12 F32 F7	SC2 D2 T2 D2 F12 F32 F7	SC2 D2 T2 D2 F12 F32 F7	SC2 D2 T2 D2 F12 F32 F7	SC2 D2 T2 D2 F12 F32 F7	CD T	SC2 D2 T2 D2 F12 F32 F7	SC2 D2 T2 D2 F12 F32 F7	SC2 D2 T2 D2 F12 F32 F7	SC2 D2 T2 D2 F12 F32 F7	4WD T	SONAR CD	LDW F2	NATS SC	SE F7	AIRL F2	RCM F2	SCM F2	AS F2	MA F7	IVMS F2	TCS F2	AP	ABD	CON	E-SUS	LAS	SC2 D2 F2										

Nissan V41.80 Diagnostics List(Note:For reference only)

ILLUSTRATION: S:Sys. Info. C:DTC--Read code & Clear code D:Data Stream T:Action Test F:Special Functions(F1、F2、F3.....)
 F1:Function test(*) F2:Work Support(*) F3:Freeze Frame(*) F4:IDLE AIR VOL LEARN(*) F5:Calib Data (*) F6:Can Diag(*) F7:Can Diag Support Mntr (*) F8:DTC&SRT CONFIRMATION

HLL:HEAD LAMP LEVELIZER , LDW:LANE CAMERA , AFS:ADAPTIVE LIGHT , NATS:NATS IMMU , SE:SMART ENTRANCE , AIRL:AIR LEVELIZER , RCM:REARVIEW CAMERA , SCM:S/BLIND CAMERA , AEM:ACTIVE ENG MOUNT , AS:ACTIVE SUS ,
 ASCD:Auto Speed Control Device , CGC:CHG COMM , TETC:TK_ECU_TYPE_CLUCH , DC:DISTANCE CONTROL , MA:MOTOR ASSIST , IVMS:Integrated Voice-Messaging System , TQC:TORQ CONT , AP:ACCELE PEDAL , CON:CONVERTIBLE ROOF

Vehicle	Vehicle Type	Release Date	Eng	AT	ABS	BCM	IPC	ABG	ICC	HVAC	ITM	EPS	IPDM	APM	HLL	E-4WD	I-KEY	DIU	ASD	PSB	ADP	4WD	4WAS /RAS /HICAS	SONAR	LDW	NATS	SE	AIRL	RCM	SCM	AS	MA	IVMS	TCS	AP	ABD	CON	E-SUS	LAS	Break Cont	AUTO SLID	CAN GAT EWA	POP UP HOO	TOTAL ILLU	OCCUPANT	MULTI DISP	SVT							
FAIRL ADY Z	Z34	2008 2009 2010	SC D T	F1	SC D	SC D				SC D			SC D		SC D																																							
FAIRL ADY Z	Z33	2002 2003 2004 2005 2007	SC D T	F1	SC D	SC D						SC D	SC D	SC D	SC D	SC D	SC D				SC D	SC D																																
FAIRL ADY Z	HZ34	2009 2010	SC D T	F1	SC D	SC D				SC D			SC D		SC D																																							
FUGA	Y51	2009	SC D T	F1	SC D	SC D				SC D	SC D		SC D	SC D	SC D						SC D	SC D																																

